



TASKI[®] vacumat 44T with fixomat


1 Preparation




Display warning sign.




Check equipment, especially plug and cable. Report any fault or damage to a supervisor.

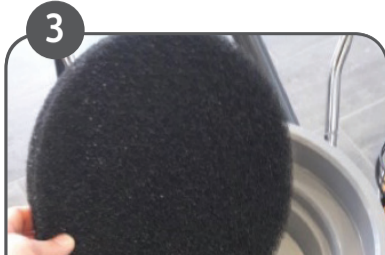


Apply vacuum lid and connect the hose to the machine.

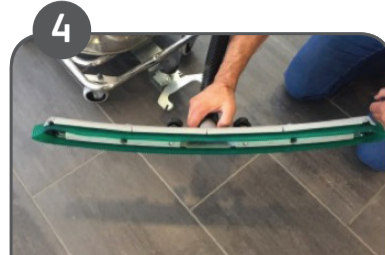


Check if the blades are OK.

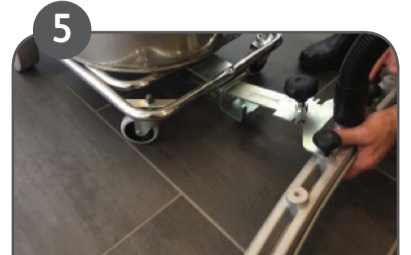


Add the squeegee to the fixomat.




Change from "Parking position".

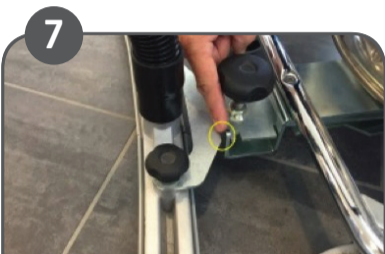

To "Work position".




Required material.



Insert water filter.



Insert air Filter.




Close vacumat head.




12 Operation

Switch on machine.




13

Push vacumat forward and make sure the cable is lying flat on the dry floor.



14 Maintenance

Push the lever to release the hose.




15

Remove filters and empty the machine.




16a


Remove filters and tools and rinse them with clean water.



16b



16c

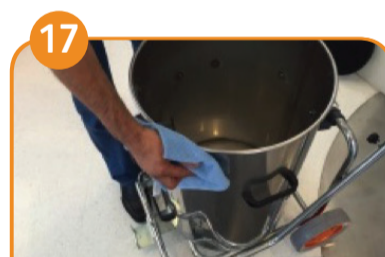

17

Wipe vacumat with microfiber cloth.



18

Coil cable around tidy wiping clean with damp cloth as you do.



1 Preparation

Display warning sign.

Check equipment, especially plug and cable. Report any fault or damage to a supervisor.

Apply vacuum lid and connect the hose to the machine.

Apply tools to the hose.

Required material.

Insert water filter.

Insert air Filter.

Close vacumat head.

9 Operation

Switch on machine.

Use tools to work backward for best result and take care that the cable is lying flat on dry floor.

11 Maintenance

Push the lever to release the hose.

Remove filters and empty the machine.

Remove filters and tools and rinse them with clean water.

Wipe vacumat with microfibre cloth.

Coil cable around tidy wiping clean with damp cloth as you do.

