YC08 : RESTORE

High performance liquid restorer for machine glass and dishwashers.

Description of product

Easy to use, empty entire bottle into water tank of machine. Removes limescale and non-visible films from glasses, dinnerware and the internal workings of machines. Effective for over 35 washes. Use when glasses are visually cloudy, after a failed water break test, pints are fobbing and pints are flat. Perfect for when glasses fail the water break test. Use when internal elements of dishwasher appear white. Use when dishwasher performance drops.

Directions

Empty 1 Litre bottle into tank of dishwasher or glasswasher. Run dishwasher or glasswasher as normal.

