







Ensure the machine is unplugged and check the mains for damage. If cable is damaged, do not use machine!





Mount brush unit.



Fill solution tank with clean water and dose the cleaning solution.



Or use Diversey Care cleaning solution dosing system.



Release parking position by lifting machine a bit (parking position is flipped back automatically).



Plug in machine.



Turn machine on (left button), and start solution supply (right button).



Adjust solution flow manually.



Start vacuum motor.



Adjust height of the handle (use orange fixation for floated cleaning).



Start brush rotation by pressing the levers and clean the floor.



Front squeegee for removing the water when going backwards. Use the lever right-hand!



Clean the floor.



machine, and then unplug the





Drain, rinse and clean the



Remove and clean floater unit.



Empty fresh water tank and



with its handle, and flipping the









Store machine with open lid