



## TASKI<sup>®</sup> ergodisc 165/200/238





Display warning signs.



Check equipment, especially plug and cable. Report any fault or damage to a supervisor.



Do not plug in and switch on at socket until machine is ready for use.



Tip machine back to put handle on floor and fit pad/ pad drive or brush. Raise back upright..

If carpet cleaning, use appropriate shampoo solution depending on carpet skimming, bonnet mopping, wet or dry (165 only) shampoo operation.





If carpet shampooing, remove additional weight from ergodisc165 and always prewet shampoo brush.



Squeeze lower lever. Adjust handle position so operator's back is straight with arms slightly bent. Release lever to lock in position.



To activate machine hold locked handle so pad is flat to floor. Press orange safety button and squeeze upper



Raise the handle upwards to go right and lower the handle to go left. Raise Right – Lower



Commence scrubbing at furthest point from plug socket.



Work backward with cable behind you at all times.



Hold cable over handle, NOT over shoulder. Keep cable out of solution.



Keep cable flat on the floor, NOT taut.



Cut in edges to avoid corrugated effect.



Work from side to side with overlapping passes.



Check pad/brush regularly for clogging. Unplug machine and turn/change pad as required.



Put handle in upright position when not in use. Unplug if left unsupervised.



When changing socket, coil cable from machine to plug, not plug to machine, to avoid twisting.







If solution tank fitted, check only), empty and rinse thoroughly.







pad drive or brush fitted.

