



TASKI ergodisc 400/438 user guide





Display warning signs.



Check equipment, especially plug and cable. Report any fault or damage to a supervisor. Label as faulty and do not use.



Dust control floor area with mop sweeper.



Tip machine back to put handle on floor and fit pad/pad drive or brush.



Do not plug in and switch on at socket until machine is ready for use.

Operation



Lower handle to a comfortable position by squeezing lower lever.



To activate machine press in yellow button whilst squeezing upper lever. Raise handle for right. Lower handle for left.



Raise handle for right. Lower handle for left.



Commence buffing/spray cleaning at furthest point from plug socket.



Work backward with cable behind you at all times.



Hold cable over handle, NOT over shoulder. Keep cable out of solution.



Keep cable flat on the floor, NOT taut.



Cut in edges to avoid corrugated effect.



Work from side to side with overlapping passes.



Check pad/brush regularly for clogging. Unplug machine and turn/change pad as required.



Put handle in upright position when not in use. Unplug if left unsupervised.



When changing socket, coil cable from machine to plug, not plug to machine, to avoid twisting.





Wind cable back into handle, wiping clean with a damp cloth







Leave to dry.