

TASKI[®] ergodisc omni



Display warning signs.



Check equipment, especially plug and cable. Report any fault or damage to a supervisor. Label as faulty and do not use.



Fill dosing bottle with required solution.



Dust control floor area with mop sweeper.



Tip machine back to put handle on floor and fit pad. Turn pad retainer anticlockwise to lock on.



Do not plug in and switch on at socket until machine is ready for use.



Lower handle to a comfortable position by squeezing lower lever.



To activate machine press in yellow button whilst squeezing upper lever. Raise handle for right. Lower handle for left.



Hold cable over handle, NOT over shoulder.



Keep cable flat on the floor, NOT taut.



Commence buffing / spray cleaning at furthest point from plug socket. Work backward with cable behind you at all times.



Cut in edges to avoid corrugated effect.



Where possible, start at side nearest plug socket.



Turn away from the socket at the end of each pass so cable lies on the area already cleaned. Allow 2" overlap.



When spray cleaning, press dosing button briefly once every 5 – 10 paces (depending on soling).

Ensure pad does not become over wet. Cover whole area.



Check pad/brush regularly for clogging. Unplug and turn/ change as required.



Change to fresh, dry pad and repeat procedure – buffing only.



Put handle in upright position when not in use. Unplug if left unsupervised.



When changing socket, coil cable from machine to plug, not plug to machine, to avoid twisting.

Maintenance









Empty dosing bottle and rinse bottle and pipe with warm

