

ERGODISC FLEXX 43 (no spray unit)

Preparation



1 Display warning signs./ prepare PPE



2 Lay the machine down with handle on the floor to fit pad/pad drive or brush.



3 Remove battery from charger.




4 Insert battery into battery compartment.



5 Fit additional weight/s as required.



6 If required fit & secure solution tank.

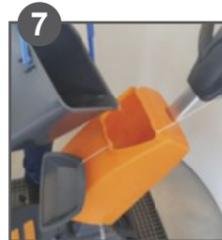

7 Fill with water and dosing cleaning chemical.



8 Insert water tank hose into top of machine and solution feed cord is fitted and working.

Operation



9 Lower handle to a comfortable position by squeezing the right lower lever.




10 Press the correct cleaning speed button for the application.



11 To activate machine press in orange button whilst squeezing the upper lever/s.



12 Raise the handle to move to the right. Lower handle to move to the left.

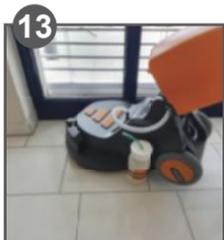

13 First clean along edges.



14 Work from side to side with overlapping passes.



15 When not in use, put the handle in an upright position. Switch battery off if left unsupervised.



16 Exchange batteries if further work is required.



17 Switch off battery when application is completed.



18 Remove battery.



19 Place the battery on the charger.
Orange = charging
Green = fully charged
Red = fault



20 Remove pad/pad drive or brush. Wash and hang to dry.



21 Wipe machine clean with a damp cloth.



22 If the foam generator is fitted, empty and rinse thoroughly.



23 If the solution tank is fitted, empty and check/clean the valve as required.



24 Do not store machines with pad/brush fitted.

Maintenance

Speed setting

- 1.HD
- 2.Low
- 3.High

Primary application guidelines

- Grinding / Sanding / Crystallization / TWISTER / Stripping
Stripping / Scrubbing / TWISTER / Carpet wet shampooing / Carpet dry foam shampooing / Carpet bonnet skimming
Spray cleaning / Dry buffing / Carpet bonnet skimming

ATTENTION!

Do not use the machine before you have read and understood the operating instructions!
Questions: 1-800-558-2332

